

DURACELL[®]

+ RECHARGEABLE - PRE-CHARGED

Value Charger

Important Safety Instructions:

1. Save these instructions - this sheet contains important safety and operating instructions for this charger.
2. Before using battery charger, read all instructions and caution markings.
3. Charge NiMH rechargeable batteries only. Do not charge NiCd, Alkaline, Zinc Carbon, Lithium or any other kind of batteries not specified as they may burst causing personal injury and damage. Keep batteries away from fire or explosion may occur. For proper insertion, please observe pole indicators (+/-). Charge new batteries before using. Rapid Charging Action. Never use different battery types or systems at the same time.
4. Indoor use only, do not expose charger to rain or snow.
5. Do not place in water or near extreme heat.
6. Never use an extension cord or any attachment not recommended by DURACELL, otherwise this may result in a risk of fire, electric shock or injury to persons.
7. Do not disassemble charger. Disassembly may result in a risk of electric shock or fire.
8. To reduce risk of electric shock, unplug the charger from the outlet before attempting cleaning or when not in use.
9. Never use as a power source for any electrical equipment.
10. Unplug the charger when not in use.

Operating Instructions:

Note: You can charge 2 or 4 AA NiMH batteries or 2 AAA NiMH rechargeable batteries in this charger. Batteries must be charged in pairs according to specific battery sizes - refer to position chart.

1. Insert 2 or 4 pieces of AA or 2 pieces of AAA NiMH rechargeable batteries. AA and AAA batteries can not be charged at the same time.
2. Insert the NiMH batteries into the battery compartment with correct polarity and in the correct positions - refer to position chart.
3. Plug the charger into an AC power outlet for charging.
4. The LED indicator will be red when charging is in progress. It will turn green when the batteries are fully charged.
5. Unplug the charger after charging is complete.

Position Chart



CEF14DXZ

Now with
DURACELL
RECHARGEABLE PRE-CHARGED BATTERIES

Ideal for Digital and High-Drain Devices



Caution: Charge NiMH rechargeable batteries only. Do not mix with other rechargeable or nonrechargeable batteries. Do not use non rechargeable (disposable) batteries. Misuse could cause batteries to rupture causing personal injury or damage. Indoor use only. Dry location use only. Risk of electric shock. Never disassemble or alter any part of the charger or batteries. Not recommended for use by children.

© 2007 DURACELL
Duracell, a division of Bethel, CT 06801
www.duracell.com
Made in China
95938785



0 41333 14635 5

Charges in 6 Hours
LED Indicators

Condition	LED Indicator
Charging	Red
Complete Charge or Trickle Charge	Green

