

## Canon Digital Video Camera ZR/60

Preparing to Video Tape...Page 2

Video Taping...Page 4

Playing Back What you Just Recorded...Page 5

For Instructions on **uploading your video** to a computer, please refer to the document entitled “*Uploading Your Video*”

at [http://www.wheelock.edu/IT/Uploading\\_a\\_video.pdf](http://www.wheelock.edu/IT/Uploading_a_video.pdf).

Click on the page number or link to be taken directly to page or website.


This Documentation was created October 2003



## Preparing to Video Tape

This video camera comes with a Rechargeable battery as well as the ability to plug into a house hold power source.

If you are going to video tape in a place where there is no power source, then it is important to make sure that the camera's battery is charged before you begin video taping. It takes about 110 minutes to fully charge the battery for this camera.

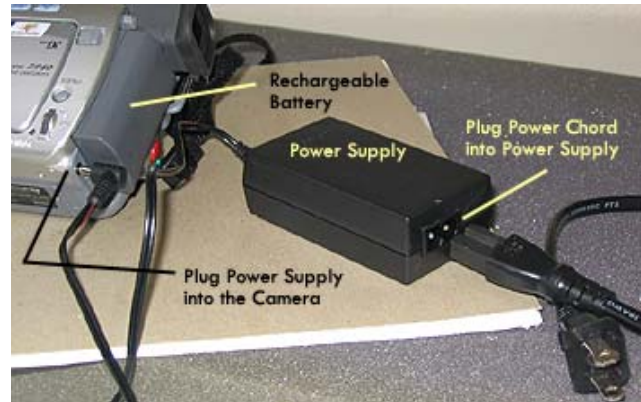

### The Video Cassette

One (1) Video Cassette comes with each Camera. You can request **additional tapes** when you pick up your camera from the IT department if you believe that one tape is not going to be enough.

If you are video taping and do find yourself short and cannot make it back to the IT Department or the IT Department is closed, make sure you purchase tapes with this logo on it.



### Loading the Video Cassette

Turn the Camera upside down.

1. Slide and Hold the Open/Eject button and open the Cassette Compartment Cover. The Cassette Compartment opens automatically. (See below)



### Loading the Video Cassette (continued)

2. With the Strap that has the Canon Logo on it facing you, insert the cassette into the camera with the Yellow Tape protection tab up and on the left hand side.



3. Push gently on the side and the Camera will automatically close the cassette and get it ready for video taping.



**Remote or Wireless Controller** comes with each Video Camera, and can be found in the small front pocket of the camera case. If you would like to use this device, please refer to page 14 and 24 of the manual for further instructions.

## Video Taping

### 1. Remove the lens cap



### 2. Open LCD Screen



Next to the battery supply on the back of the camera is a red button with a green line next to it

Move the Green line to Camera Mode.  
Press the red button

In the upper right hand corner of your LCD Screen the word RECORD will appear. When you are finished, press the Red button again and the word PAUSE will appear in the upper right hand corner of your LCD Screen.

When you have completed Video taping, move the Green line to the off Position.



## Zoom

3. To Zoom in and out, look at the top of the Camera above the Record Button, there is a dial with the letters W-T under it.

To zoom in turn the dial to the right and to turn left, turn the dial to the left.



---

## Playing Back What You Just Recorded

1. Open the LCD Screen
2. Make sure the Camera is set in PLAY (VCR) mode



Above the LCD Screen, you will see 4 buttons.

3. Rewind your video (button with the - sign)
4. Press Play (button with the word Focus)

Your video will appear in the LCD Screen

