 


Cuisinart®

INSTRUCTION BOOKLET

Refurbished Product Warranty

This product was refurbished with genuine Cuisinart parts. Refurbished products carry a 90 day limited warranty. To obtain warranty service for a refurbished product, please follow the directions found in the warranty section of this Instruction Booklet.

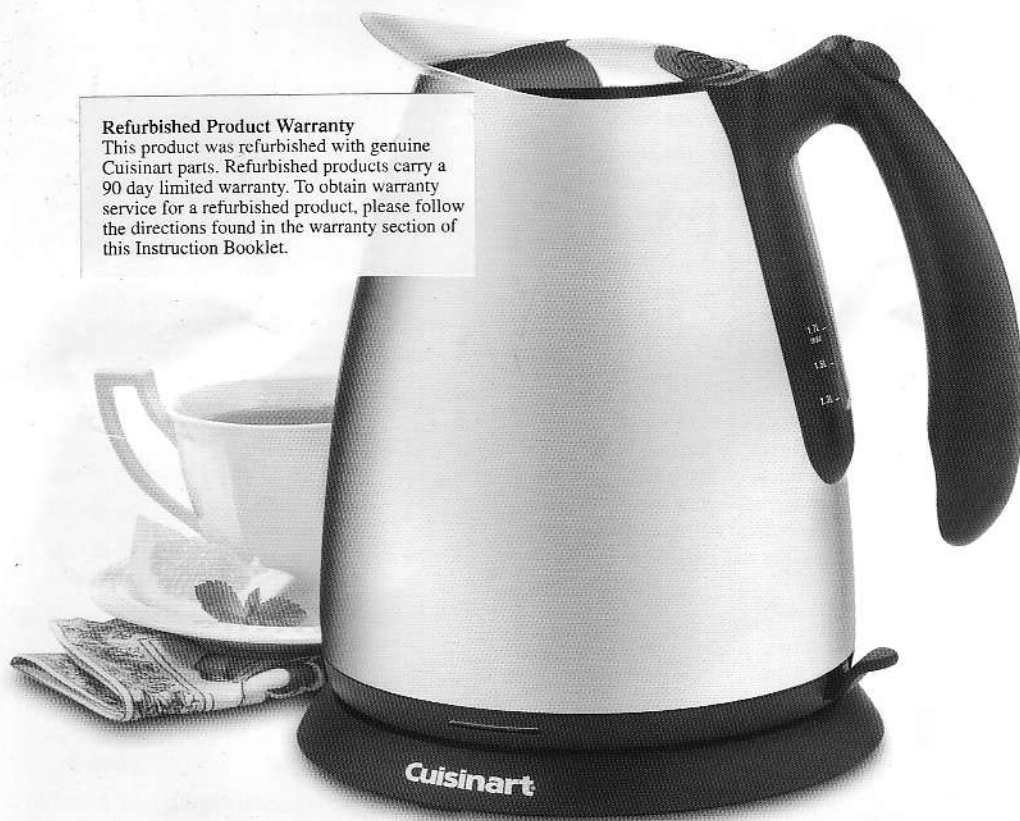

CORDLESS Electric Jug Kettle

CJK-17BC

IMPORTANT SAFEGUARDS

When using an electrical appliance, basic safety precautions should always be taken, including the following:

1. **READ ALL INSTRUCTIONS.**
2. Do not touch hot surfaces. Use handles and knobs.
3. To protect against fire, electric shock and injury to persons, **DO NOT IMMERSE CORD, PLUG OR BASE UNIT** in water or other liquids.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning appliance.
6. Do not operate any appliance with a damaged cord or plug, or after the appliance has malfunctioned or has been damaged in any manner. Return appliance to the nearest Cuisinart Authorized Service Facility for examination, repair or adjustment.
7. The use of accessory attachments not recommended by Cuisinart may result in fire, electric shock or injury to persons.
8. Do not use outdoors.
9. Do not let power cord hang over edge of table or counter, or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. Always attach the plug to the appliance first, then plug cord into wall outlet. To disconnect, push switch to "OFF", then remove plug from wall outlet.
12. Do not use appliance for other than intended use.
13. Scalding may occur if the lid is removed during the brewing cycle.

FOR HOUSEHOLD USE ONLY

SAVE THESE INSTRUCTIONS

SPECIAL CORD SET INSTRUCTIONS:

A short power-supply cord is provided to reduce the risks of becoming entangled in or tripping over a longer cord.

Longer extension cords are available and may be used if care is exercised.

If a long extension cord is used, the marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance. The longer cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over.

NOTICE:

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

TABLE OF CONTENTS

Important Safeguards	PG 1
Introduction	PG 2
Features and Benefits	PG 3
Operating Instructions	PG 4
Helpful Hints	PG 4
Cleaning and Maintenance	PG 5
Warranty	PG 5

INTRODUCTION

Your new Cuisinart® Cordless Electric Jug Kettle features the latest technology to make boiling water quicker and easier than ever. The elegant brushed stainless steel finish makes it the perfect addition to any table.

This kettle is exceptionally simple to operate, but as with every new product, we suggest you read the following information carefully to familiarize yourself with the Kettle's use and care.

ULTIMATE CONVENIENCE

The Cuisinart® Cordless Electric Jug Kettle will quickly become part of your daily routine. One touch of the on/off switch begins the heating process. In just minutes, this contemporary cordless kettle brings up to 1-3/4 quarts of water to the boiling point and then turns itself off. You'll wonder how you lived without it!

Making Tea with your Cordless Automatic Electric Jug Kettle

The most traditional use for a kettle is making tea. Your Cuisinart® kettle will be a fast and convenient way to make your cup of tea.

Whether using tea bags or loose tea, buy the best you can. The flavor will only be as good as the quality of the tea. Tea tastes best when steeped in a ceramic pot or cup.

For best results, use your Cordless Electric Jug Kettle following the operating instructions on p.4, as well as the following tips:

1. Fill kettle with fresh, cold water.
2. Place an infuser with loose tea or tea bag(s) in your ceramic pot or cup.
3. Wait for kettle to click off, and immediately pour the boiling water onto the tea.
4. The tea should be allowed to steep for 3 to 5 minutes. The longer it steeps, the stronger it is. For iced tea, brew tea double-strength (steep twice as long) and pour over ice.
5. Stir and serve as desired.

 
Uses for your Cordless Electric Jug Kettle

With the Cordless Electric Jug Kettle, you can make all your favorite hot beverages ... and much more!

- Tea
- Instant Coffee
- Hot Chocolate
- Flavored Coffee Drinks
- Hot Cereal and Oatmeal
- Instant Soups
- Instant Noodles
- Instant Rice
- Instant Pasta

FEATURES AND BENEFITS

- 1. 18/10 Stainless Steel Construction with 1-3/4 Quart (1.7L) Capacity**
- 2. Maximum Fill Mark**
"MAX" located near handle indicates the maximum amount of cold water to be added.
- 3. Wide Mouth Spout**
- 4. Stay-Cool Handle**
(Ergonomically shaped for comfort.)
- 5. Lid with Release Button**
For quick and easy filling.

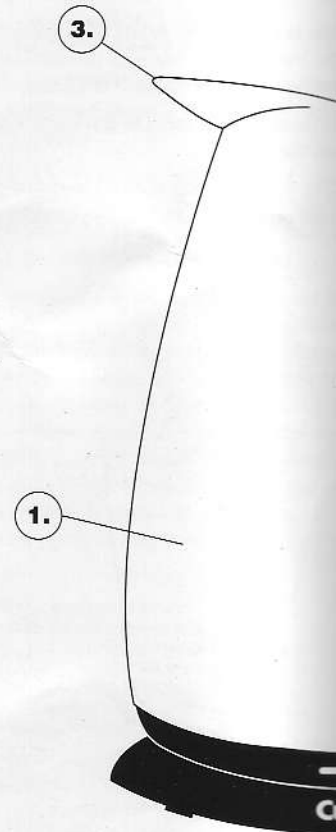

FEATURES AND BENEFITS

1. 18/10 Stainless Steel Construction with 1-3/4 Quart (1.7L) Capacity

2. Maximum Fill Mark
"MAX" located near handle indicates the maximum amount of cold water to be added.

3. Wide Mouth Spout

4. Stay-Cool Handle
(Ergonomically shaped for comfort.)

5. Lid with Release Button
For quick and easy filling.

6. Power "On" Switch

Simply lift switch (gently lifting up until "click" is heard) to begin the boiling process. Kettle shuts off automatically once water has boiled, or when kettle is lifted from power base.

7. "ON" Indicator Light

Illuminates when kettle is on.

8. Power Base

Supplies power to kettle.

9. Cord Wrap (under base)

Unwind only as much as you need. Provides convenient storage.



OPERATING INSTRUCTIONS

BEFORE USING FOR THE FIRST TIME

Before using your Cuisinart® Cordless Electric Jug Kettle for the first time, we recommend operating the kettle 2 or 3 times, following the instructions below. This will remove any dust or residue remaining from the manufacturing process.

BOILING WATER

1. Open the Lid.

Push the release button on the handle and the lid opens. (See Fig. 1.)

2. Fill the Kettle.

Fill the kettle with as much fresh, cold water as you will need. The maximum water level is indicated near the handle and is marked by the word "MAX". (See Fig. 2.)

3. Close the Lid.

Position kettle with spout facing away from you. Press gently toward you to close.

4. Place Kettle on Power Base

Place the kettle on the power base so the element on the bottom of the kettle sits securely on the power base.



Figure 1

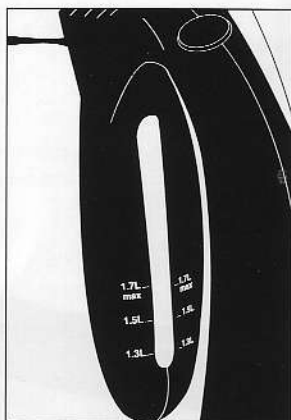 


Figure 2

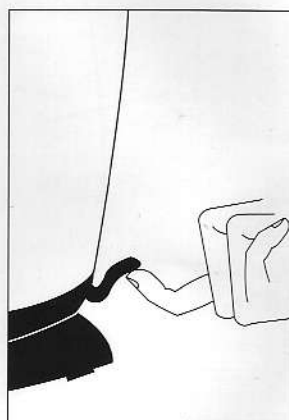 


Figure 3

5. Power "ON".

Activate the power "ON" switch by gently lifting up until a "click" is heard (See Fig. 3.) When the water has boiled, the kettle will automatically switch "OFF".

NOTE: The kettle can be switched off at any time before the water boils, simply by lifting the kettle off the base.

6. Pour and Serve.

Pour water out slowly. Return kettle to base after pouring. If you wish to reboil the water, you must lift the power "ON" button again.

HELPFUL HINTS

Always use fresh, cold water for each boiling.

If the kettle is accidentally switched "ON" without a sufficient water level, a boil-dry mechanism will automatically switch the kettle "OFF".

Empty kettle after each use. Do not leave water standing in the kettle.

NOTE: For your safety, it is recommended that the lid be closed on the kettle whenever kettle is in use.

CLEANING AND MAINTENANCE

CAUTION: Always disconnect the kettle electrical outlet before cleaning.

Before cleaning, be sure the kettle is cold.

Clean the exterior surface of the kettle with a damp cloth to preserve its original highly polished finish. Dry and polish with a soft cloth.

Do not use abrasive cleansers or scouring agents of any kind on the interior or exterior of the kettle.

Do not immerse the kettle or power base in water or other liquid, and be sure that the electric kettle socket is kept dry.

DECALCIFICATION

Decalcification refers to removing the calcium deposits which may form in the interior metal parts of the kettle.

To get the best performance from your Cuisinart Kettle, decalcify your unit from time to time. Frequency depends on the hardness of your tap water and how often you use the kettle.

We suggest use of a kettle descaler in order to dissolve these chalky deposits or scale. Follow directions on the descaler package. If a commercial descaler is not available, fill the kettle with equal parts white vinegar to cover the bottom by about 1 inch. Bring the vinegar to a boil. You may need to repeat this several times with cooled vinegar to remove the calcium buildup completely. When the descaling process is complete, empty the kettle and rinse out several times with clean water.

Refurbished Product Warranty

This product was refurbished with genuine Cuisinart parts. Refurbished products carry a 90 day limited warranty. To obtain warranty service for a refurbished product, please follow the directions found in the warranty section of this Instruction Booklet.

For personal, family or household use. Except otherwise required under applicable law, this warranty is not available to retailers or other commercial purchasers or owners.

CLEANING AND MAINTENANCE

CAUTION: Always disconnect the kettle from electrical outlet before cleaning.

Before cleaning, be sure the kettle is cold.

Clean the exterior surface of the kettle with a clean, damp cloth to preserve its original highly polished finish. Dry and polish with a soft cloth.

Do not use abrasive cleansers or scouring agents of any kind on the interior or exterior of the kettle.

Do not immerse the kettle or power base in water or other liquid, and be sure that the electric kettle socket is kept dry.

DECALCIFICATION

Decalcification refers to removing the calcium deposits which may form in the interior metal parts of the kettle.

To get the best performance from your Cuisinart® Kettle, decalcify your unit from time to time. Frequency depends on the hardness of your tap water and how often you use the kettle.

We suggest use of a kettle descaler in order to dissolve these chalky deposits or scale. Follow the directions on the descaler package. If a commercial descaler is not available, fill the kettle with enough white vinegar to cover the bottom by about 1/2". Bring the vinegar to a boil. You may need to repeat this several times with cooled vinegar to remove the calcium buildup completely. When the descaling process is complete, empty the kettle and rinse out several times with clean water.

Refurbished Product Warranty

This product was refurbished with genuine Cuisinart parts. Refurbished products carry a 90 day limited warranty. To obtain warranty service for a refurbished product, please follow the directions found in the warranty section of this Instruction Booklet.

ly.
g
retail

not personal, family, or household use. Except as otherwise required under applicable law, this warranty is not available to retailers or other commercial purchasers or owners.

We warrant that your Cuisinart® Electric Jug Kettle will be free of defects in materials and

workmanship under normal household use for 1 year from the date of original purchase.
We suggest that you complete and return the enclosed warranty registration card promptly. However, return of the card is not a condition of this warranty and does not guarantee the need for the manufacturer to maintain the original level of production. It is your responsibility to have your product repaired or replaced at the discretion of the manufacturer.

If your Cuisinart® Electric Jug Kettle should prove to be defective within the warranty period, we will repair it, or replace if necessary, without charge to you except for a shipping and handling charge.

Your Cuisinart® Electric Jug Kettle has been manufactured to the strictest specifications and has been designed for use only with authorized accessories and replacement parts. This warranty expressly excludes any defects or damages caused by accessories, replacement parts or repair service other than those which have been authorized by Cuisinart.

To obtain warranty service, please call toll-free 1-800-726-0190 or write to Cuisinart, 150 Milford Road, East Windsor, NJ 08520.

To facilitate the speed and accuracy of your return, please also enclose \$5.00 US (California residents need only supply a proof of purchase and should call 1-800-726-0190 for shipping instructions). Please be sure to include a return address, description of the product's problem, product serial number, and any other information pertinent to the product's return. Please pay by check or money order.

This warranty does not cover any damage caused by accident, misuse, shipment or other than ordinary household use.

This warranty excludes all incidental or consequential damages. Some states do not allow the exclusion or limitation of these damages, so they may not apply to you.